Majestic Appliances

WHERE SERVICE MATTERS

Model MJ-9000V
Model MJ-9000VG (Greystoke Model)

Owners Manual

Very Important !
Read Installation Instructions On Page 5

Website: http://www.MajesticAppliances.com

Manufacturers Supply Inc dba Majestic Appliances © 2004

Important Safety Instructions

WARNING- To reduce the risk of fire, electric shocks, or injury to persons when using your appliance, follow the basic precautions, including the following:

1. Read all instructions before using the appliance.
2. Do not wash articles that have been previously cleaned in, washed in, or spotted with gasoline, dry-cleaning solvents, or other flammable and explosive substances such as solvents. Do not leave machine running and unattended.
3. Do NOT leave machine unattended when in use.
4. Do not add gasoline, dry-cleaning solvents or other flammable or
5. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. If this is the case, before using your washing machine, turn on all hot water faucets and let the water flow from each faucet for several minutes. This will release any accumulated hydrogen has. Do not smoke or use an open flame during this
6. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is in use.
7. Before the appliance is removed from service or discarded, remove the door.
8. Do not reach into the appliance if the tub or agitator is moving.
9. Do not install or store this appliance where it will be exposed to the weather.
10. Do not tamper with controls.
11. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair manual. Also make sure that you understand the instructions completely and have the skills to carry them out.
12. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
13. Do not use heat to dry articles containing foam, rubber or similarly textured rubber-like materials.
14. Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust and dirt.
15. The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
16. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
17. This appliance must be grounded. Refer to the INSTALLATION INSTRUCTIONS for grounding details.

SAVE THESE INSTRUCTIONS

Manufacturers Supply Inc dba Majestic Appliances © 2004

Welcome...

Congratulations. Welcome to the growing family of Majestic™ Appliance owners. By choosing a Majestic Appliances model as your laundry appliance you not only found the best in reliable technology, but above all you have found a faithful and untiring convenience appliance.
Your machine is strong, reliable and long lasting. All those qualities which have made the Majestic™ trademark famous the world over.
Above all, Majestic products are easy to use. Read this owner's manual carefully since it contains all the instruction for safe installation, use and maintenance.
Remember to keep your owner's manual in a safe place so that you can refer to it whenever you need to.
For additional information and contact with the our staff, we invite you to visit our web site.

http://www.MajesticAppliances.com
(Please Register your appliance, on our web site or by returning your registration card via mail and receive a complimentary sample of approved Majestic Laundry Detergent.)

We offer a wide range of appliance products, some of which might suit your needs. We also offer our revolutionary MajesticAppliances.TV web option, where you can view orientation movies on the web as well as comments from other users and frequently asked questions. Welcome to our Family!

For Your Records

Thank you for purchasing our Majestic Appliances Product. This manual will guide you in getting the most productive use of your appliance purchase.
Remember to record you Model and Serial Number. They are on a label on the back of the machine or inside the door.

_____
Model Number

_____
Serial Number

_____
Date of Purchase

Staple your receipt to your manual. **YOU WILL NEED IT TO OBTAIN WARRANTY SERVICE!**

Manufacturers Supply Inc dba Majestic Appliances © 2004

Table of Contents

Instant help

Page 5 **Getting things ready to install your appliance**

Unpacking, Inspecting, Electricity, Closets/ Alcoves, Plumbing, Venting

Page 8 **For best results washing**

Preparation, sorting, inspecting, pre-wash treatments, helpful laundry hints, simple controls, detergent disspensers

Page 11 **Selecting dry cycles**

Drying Controls, Cottons, Synthetics/Delicates, Wool

Page 13 **Troubleshooting**

Washing, Drying, Vibration, Optimizing dry time, wrinkles, draining

Page 14 **Maintenance tips**

Water,exterior, interior, winterizing, detergent, pump, technical specifica≠tions, Obtaining Service

Page 16 **Warranty Information**

Registering your appliance via the in≠ternet, Extended Warranty options, ordering maintenance manuals

Manufacturers Supply Inc dba Majestic Appliances © 2004

Installing/Removing
Getting things ready to install your appliance
Unpacking, Inspecting, Electricity, Closets/Alcoves, Plumbing, Venting
Unpacking

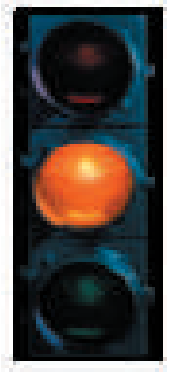

- Check the packing box for external damage. It is your responsibility to register any damage with the freight company delivering the product.
- Remove the strapping, then slide the cardboard surround off the machine. Re≠move the foam protecting material and the plastic bag.
- Write down the serial number from the box or the back of the machine.
- Destroy the carton, plastic bags and foam parts after appliance has been unpacked.
- Children should never be left alone or unattended in the area where appliances being unpacked.
- If you have any doubts, do not use the appliance and call on a qualified tech- nician.

OWNER RESPONSIBLE FOR DAMAGE RESULTING FROM TIPPING MACHINE AFTER REMOVING SHIPPING BOLTS. AVOID TIPPING MACHINE FORWARD AFTER SHIPPING BOLTS ARE REMOVED

Inspecting WHEN TO REMOVE SHIPPING BOLTS!

WARNING!!! TIPPING THE MACHINE TO POSITION IT FOR USE MUST BE DONE WITH THE SHIPPING BOLTS STILL IN THE MACHINE!
TIPPING THE MACHINE WITHOUT SHIPPING BOLTS, CAN CAUSE THE INNER DRUM TO IMPACT OTHER INTERNAL PARTS, THUS DAMAGING THEM. POSITION THE MACHINE AS CLOSE AS POSSIBLE TO IT'S FINAL POSITION AND THEN REMOVE SHIPPING BOLTS.

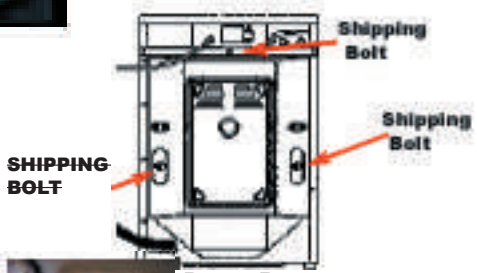

Brass Pressure Regulators installed on back of appliance.

INSPECT CONTENTS

[ ] Owners Manual

Brass Pressure Regulators

[ ] (Must be installed on hot and cold water inlet. Failure to do so can damage the internal components and cause water damage for which the installer/owner will be re- sponsible!)

[ ] Warranty Registration Card

[ ] Majestic Literature

[ ] Drain Hose U-Clip (Optional)

[ ] Hoses have washers in both ends.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Installing/Removing
Getting things ready to install your appliance (continued)
Electricity

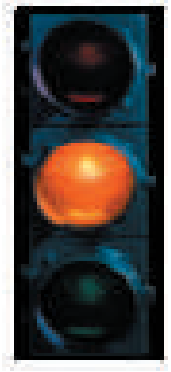

Make sure that the voltage and frequency available correspond with the values stated on the data plate located at the back of the machine and that the electric system is dimensioned to withstand the maximum current shown on the data plate. If the socket the machine is connected to does not correspond with the plug, replace the plug with a suitable one and avoid using adapters or shunts since they could cause over heating and burn out.

Grounding

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having and equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified or service representative or personnel if you are in doubt as to whether the appliance is properly grounded.

Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Electrical Specifications:

Voltage/Amperage - 115V, 12 Amp, 60 Hz 3 Prong plug attached to the appliance in the factory

Circuit/Protection - 3 wires single phase, 120V, 60 Hz, AC separate 15 amp circuit or greater.

Recessed, Closet and Alcove Installations

This appliance may be installed in a recessed area, closet or alcove. All measurements are in inches.

• If the appliance is to be installed in a closet with zero clearance on the side of the appliance, a total of 12 square inches of free air space movement to the back of the unit must be allowed into the closet.

• If a door is to be installed that potentially encloses the unit while running, the door must allow for a minimum of 20 square inches of free air movement. There must also be a 1” space from the front of the unit to the closed door and 1” from the back of the unit to the wall. Additional spacing should be considered for easy installation, servicing, removal and compliance with applicable local, state and federal codes.

• The floor must be able to support at least 280 lbs and a surface that is solid and level. If machine is to be placed in cabinet, up off the floor, it may be necessry to secure the drun with a tether to prevent excessive drum movement. Plese call Majestic Appliances for more information.

• Installations in RV’s or Marine pleasure craft suggest that the machine might best be installed midships in the boat, or over the axles of the RV where movement is at a minimum.

Adequate blocking should prevent extreme movement when installed in an RV or Marine pleasure craft.

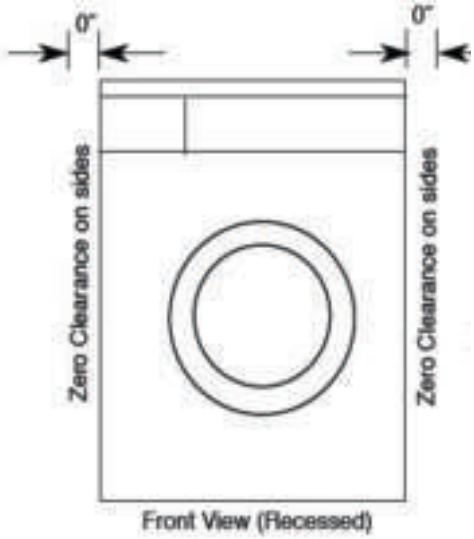

If the appliance is to be installed in a closet, the installation must be completed by a quali≠fied person or service representative.

Additional clearances for floor, wall or door moldings

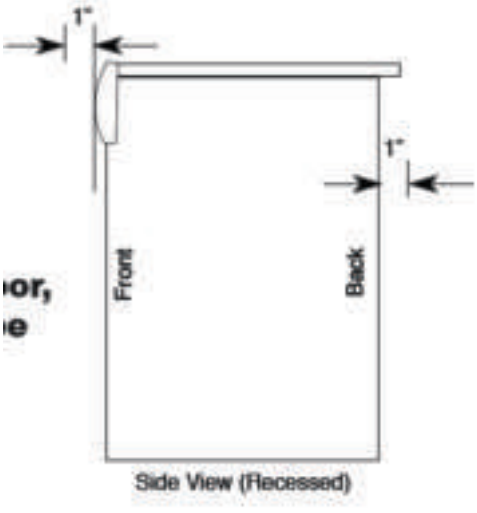

Manufacturers Supply Inc dba Majestic Appliances © 2004

Installing/Removing
Getting things ready to install your appliance (continued)
Plumbing - Water, Drains

WATER CONNECTION

1. This appliance can be used with either hot/cold or cold/cold connections.
2. The hoses supplied have either a straight end or an elbow end. The elbow end is meant to connect to the washer. Be sure to connect the hot hose to the hot side of the appliance itself, the cold side to the cold connection. (See picture) The straight end to the 3/4" BSP standard hose bib thread.
3. MAKE SURE WASHERS ARE INSTALLED IN EACH END OF THE SUPPLY HOSES.
4. Ensure that water connections are free from debris or sediment.
6. BRASS PRESSURE REDUCERS MUST BE INSTALLED TO PROTECT COMPONENTS INSIDE THE APPLIANCE.IMPORTANT ! CHECK THREADS ON THE MACHINE, THE BRASS PRESSUREREDUCERS AND THE SUPPLY HOSES TO ENSURE THEY ARE CLEAN. DO NOTUSE EXCESSIVE FORCES. TIGHTEN BY HAND. DO NOT USE POWER TOOLS.

Brass pressure reducers and elbow ends of supply hoses.

Connection of the drain hose to standpipe

• Outlet end of drain hose (See figure 2) must be at least 20" above bottom of washer. Do NOT block top of standpipe closes with tape or other materials. An air break must be provided at the standpipe to avoid siphoning.
• Connect the drain hose to a standpipe (with internal diameter of at least 3.2 cm or 1 1/4" min. diameter) with a minimum carry away volume of 7 gallons. The top of the standpipe must be 20" minimum from the botton of the appliance. Place drain hose for drainage into a sink tub or standpipe, ensuring that there are no kinks or bends. The free end must be at a height of 80 cm (31 1/2") from the floor, the hose must be fixed in the appropriate hook on the upper part of the back panel (fig.4)

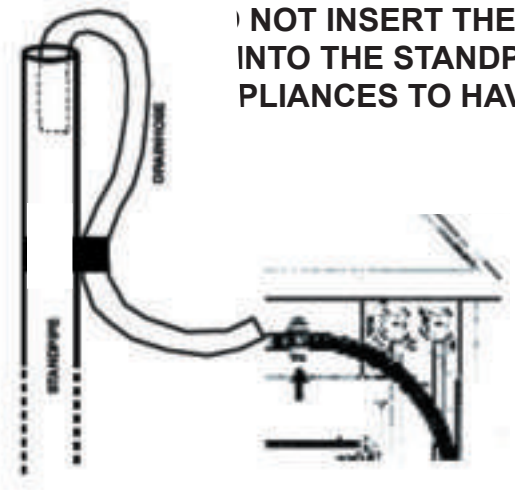

) NOT INSERT THE END IF THE DRAIN HOSE MORE THAN INTO THE STANDPIPE. INSERTING MORE MAY CAUSE THE PLIANCES TO HAVE INSUFFICIENT DRAINAGE.

CORRECT LEVELING OF UNIT IS ESSENTIAL

It is important for the machine to be perfectly level. The angle of inclination on the work surface must not be more than 2 degrees. For this reason the machine is fitted with adjustable feet used for leveling the machine before use. In the case of carpeted flooring, remember to check that the ventilation in the support area is not plugged.

Exhaust Duct Installation

• Check that all ducting is lint free. Secure ducting with clamps or metal tape.
• The exhaust duct must end with an approved exhaust vent hood with swing out dampers or appropriate louvers.
• Flex or rigid metalic ducting is recommended.
• Exhaust duct should be short and straight and slope downwards and away from the appliance. Long exhaust duct runs can increase drying time and collect lint.
IMPORTANT! THE EXHAUST DUCT SHOULD NOT BE INSERTED INTO A CHIMNEY WALL, CEILING OR CONCEALED SPACE OF STRUCTURE.

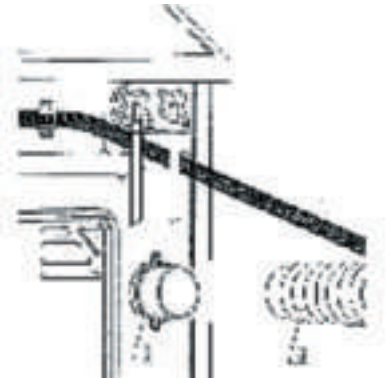

Manufacturers Supply Inc dba Majestic Appliances © 2004

Washing

For best results washing

Preparation, sorting, inspecting, pre-wash treatments, helpful laundry hints, simple controls, detergent dispensers

Preparation

Before you begin washing, taking a few simple steps will help you have a better washing experience and save wear and tear on your clothing as well.
1) Read factory labels for washing instructions
2) Pre-treating heavily soiled areas will also improve washing results.
3) Obtain and use Majestic™ Low Suds Laundry Soap or any other commer≠cial brand that keeps over sudsing in check. Use 1 to 2 ounces.
4) Your Majestic™ has over 13 different wash cycles that can last as long as 120 minutes or as short as 35. Select the one that is right for the load.

Sorting

Separate laundry according to fabric type, color and how dirty things are. Also consider separating clothing that generate lint from clothes that do not typically generate much lint. Cottons, synthetics, and woolen fabrics for starters. Color fast products vs. those that might bleed and fade on to other clothing. What size load? **A good rule of thumb is that clothes should be visible in the window of the machine from 1/2 to 2/3's full.**

Inspecting

This goes without saying, but check pockets for loose change, and other hidden impediments. Fas≠tening all zippers, hooks, and buttons will prevent damage to garments and to the machine. Turning knit garments inside out will also protect the garment. Using a mesh laundry pouch for delicate items such as tights and stockings,bras, shoulder pads and underwear can prevent tangling. Also, if a gar≠ment is torn or damaged, washing and drying will only make it worse. Take a minute and do a bit of mending. It will enhance fabric care in the long run.

Pre-Wash treatments

Your laundry appliance has a built in assistant to take care of your pre-wash feature. Besides indi≠vidually treating garments as need arises, also consider using a longer wash cycle if necessary that includes use of the pre-wash section of the detergent drawer. Often children's play clothes and men's work clothes take a beating and can use some extra cycles to come clean.

Helpful laundry hints

Detergent - Because this is a front loading machine, your Majestic™ requires less of almost every≠thing, from laundry detergent to fabric softener to bleach. LOW SUDS detergents are even more convenient in a front loader, because of the efficiency of clothes on clothes agitation. FABRIC SOFT≠ENER can actually improve dry times, but NEVER USE SOFTENER SHEETS OR OVERUSE SOFT≠NER. It could cause damage to your machine. And using bleach can whiten clothes when nothing else will. Always dilute bleach before using. Too much bleach can damage fabrics.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Washing

For best results washing (continued)

Preparation, sorting, inspecting, pre-wash treatments, helpful laundry hints, simple controls, detergent dispensers

Selecting/setting the wash program.

Green is for Wool

Blue is for Cotton fabrics

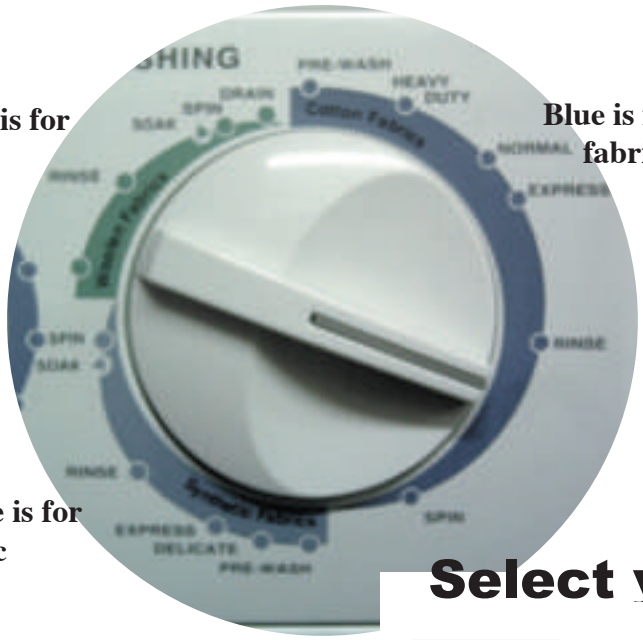

Note: Before manually rotating the washer timer, please turn the power off.
The power does not need to be turned off to move the dry timer.

Lite Blue is for Synthetic Fabrics

Select your Dry Cycle

Blue is for Cotton, up to 120 minutes.

Green is for Synthetic fabrics, is a cooler temperature, up to 90 minutes.

Use Majestic Laundry Detergent. Cost effective. On the web at http://www.thehotdeal.com or call us toll free at 1-800-678-8002.

Majestic™ controls offer a simple approach that Select the program you want to use, based on the clothing you are planning to wash. Blue is for cotton loads, green for synthetics, and red for wool. With the machine off, turn the selector knob clockwise until you have selected the wash cycle of your choice. Use the chart on page 11 for more details.

After you select the wash cycle, the timer will rotate until the cycle is finished. You are done whenthe timer has reached the ✻ at the end of the cycle. If you have set the machine for drying, the dry cycle begins automatically when the wash timer rotates to the star. You can reduce the rinse cycle on any of your selections by selecting the “Economic” button. On smaller loads the “economic button” saves you from using excess water, a Majestic™ exclusive.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Washing

For best results washing (continued)

Preparation, sorting, inspecting, pre-wash treatments, helpful laundry hints, simple controls, detergent dispenser

Controls, detergent dispenser

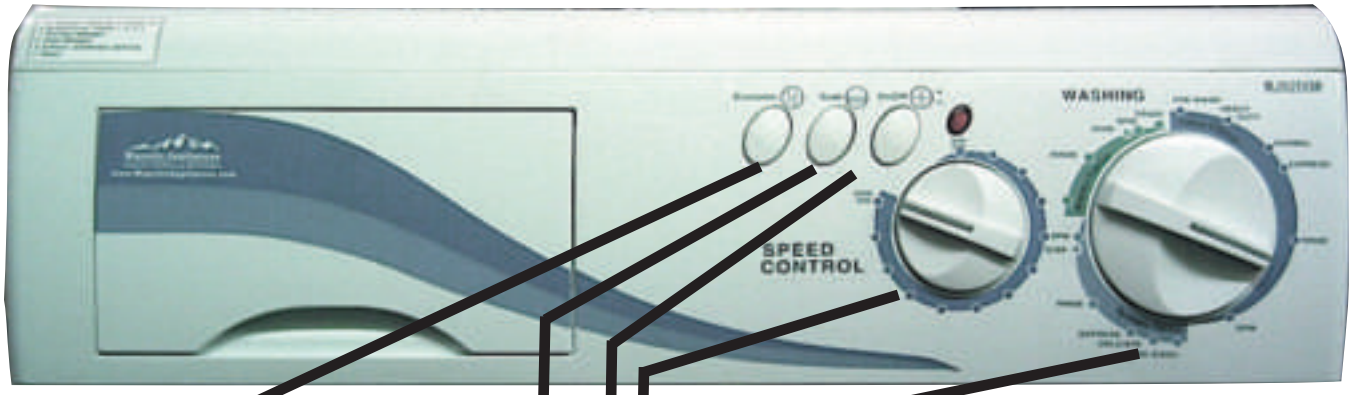

Economic Button
This is a very useful button that will save you a lot of money. It reduces water consumption when rinsing.

If you have a small load use this button and reduce water consumption.

Soak Button
During the Synthetic Cycle, some customers prefer to allow their clothing to soak in softeners before final spin. Depressing this button causes the timer to stop at the SOAK location, until you manualy advance the timer.

ON/OFF Button
This button supplies electrical power to the appliance.

Washer Timer
This control turns clockwise and allows you to select any of 14 wash cycles for any load. **It is best to adjust this with the power off.** Blue is for Cotton, light blue for synthetics and green for wool.

Dryer Control

Turn this control to the blue for Cotton. You can set up to 120 minutes for cotton drying, although the heat in this cycle may not require this much time. Up to 90 mionutes in the Synthetic cycle, which is a cooler temperture. You can use this cycle for cottons as well for cooler temps.

Detergent Drawer
The detergent dispenser is divided into 4 compartments marked 1,2, A and C.

1 Pre-wash detergent
2 Wash detergent
A Softeners, conditioners and perfumes.
C Bleach

Manufacturers Supply Inc dba Majestic Appliances © 2004

Guide for Selecting Programs on your Majestic™ laundry appliance

Type of Fabric and degree of soiledness	Detergent for Pre-wash	Detergent for wash	Softener	Bleach	Description of Wash Cycle	Water Temp	Approx. Wash Time
Pre-Wash: Heavily soiled white laundry and color fast fabrics * †	Yes	Yes	Yes	Yes	Prewash,wash, rinse, extended spin. High water level.	Hot	120 min
Heavy Duty: White and color fast fabrics * †	No	Yes	Yes		Heavy duty , rinses, extended spin	Warm	90 min
Moderate:Mixed cotton, synthetics and color fast fabrics †	No	Yes	Yes		Moderate, rinse, extended spin	Warm	60 min
Normal: Colors and whites †	No		Yes		Normal, rinse, extended spin	Cold	45 min
Rinses	No		Yes	Yes	Rinses	Cold	
Softener	No		Yes		Softener added	Cold	
Spin Cycle	No				Extended spin		
Drying cycle for natural fibers	No				Heavy fabric drying		60-90 min
Heavily soiled synthetic and color fast fabrics †	No		Yes		Heavy duty, anti-crease delicate spin	Warm	90 min
Normally soiled synthetic and color fast fabrics †	No		Yes		Moderate, anti-crease delicate spin	Warm	60 min
Synthetic fabrics with delicate colors †	No		Yes		Normal, anti-crease delicate spin	Cold	45 min
Rinses	No		Yes		Rinses	Cold	
Softener/Ant Crease **	No		Yes		Softener added	Cold	
Spin Cycle	No				Draining, delicate spin		
Drying cycle for natural fibers	No				Delicate drying		60-90 min
Woolens †	No		Yes		Delicate wash	Cold	45 min
Rinses	No		Yes		Rinses	Cold	
Softener/Ant Crease **	No		Yes		Softener added	Cold	
Spin Cycle	No		Yes		Delicate Spin		

* - TIP: You can reduce wash time by stopping at the end of selected cycle and advancing timer to rinse cycle. For example: Prewash setting when timer stops at heavy duty setting advance to rinse, you will have a 90 minute wash in hot water.

** - IMPORTANT: Timer is designed to stop at Anti-crease symbol to allow clothes to soak in fabric softener for as long as the customer feels necessary. You must advance the timer manually one click to finish the rinse and spin cycle.

† - NOTE: BLEACH & SOFTENER: There will always be residual water in the bleach and softener tray. As you add bleach or softener for a wash load any residual water will not adversely affect the bleach or softener.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Drying

Selecting Dry Cycles

Drying Controls, Cottons, Synthetics/Delicates, Wool

Drying Controls

Washing and Drying AutomaticallyIf you are washing cottons (blue) or synthetics (Green), the machine will automatically begin drying at the end of the wash cycle. Remember that the temperature for cottons (blue) is higher than the temperature for synthetics (green). It takes 15 minutes for the machine to reach full temperature.

Blue is for Cotton fabrics. Up to 120 minutes

Green is for Synthetics, is a lower temperature than cotton, up to 90 minutes.

You are in control of the drying cycle

Generally, cottons require more drying time than synthetics. You will notice that the cotton dry cycle offers up to 120 minutes of drying. Normally cotton shirts take less time than denim jeans. You will have to experiment a little to determine what dry times work for you.

Size of drying load

With the correct load size, the Majestic™ washes and drys very efficiently. If the wash load is made up of heavy and dense fabrics, you may need to split the load into two loads. After the first load is complete, turn off the power, turn the wash timer to the appropriate time, load the machine and turn the power button on again.

Caution:

For your safety, the door lock stays engaged for the duration of the dry cycle. If you want to open the door, you may, but you must turn off the power. We suggest waiting 1 minute before opening the door.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Stains

Tips on Stain Removal

BALLPOINT INK
Hold stain against towel, spray closely from behind with aerosol hair spray. Ink should transfer to towel

BEVERAGES
Soak in cool water. Re-wash with stain remover. Launder using chlorine bleach (if safe for fabric) or oxygen bleach.

BLOOD
Immediately rinse with cool water. For dried stains, soak in warm water with a product containing enzymes. Launder.

CANDLE WAX
Scrape off as much as possible with dull side of knife, then iron between absorbent paper, changing paper until wax is absorbed.

CHOCOLATE
Pre-wash with product containing enzymes in warm water or treat with pre-wash stain remover. Launder.

COLLAR, CUFF SOIL
Pre-wash with stain remover, liquid laundry detergent or paste of granular detergent and water. Launder.

COSMETICS
Pre-wash with stain remover, liquid laundry detergent or paste of granular detergent and water or rub with bar of soap. Launder.

DAIRY PRODUCTS
Soak in a product containing enzymes for at least 30 minutes (hours for aged stains). Launder.

DEODORANTS & ANTI-PERSPIRANTS
Pre-treat with liquid laundry detergent. Launder. For heavy stains pre-treat with pre-wash stain remover. Allow to stand 5 to 10 minutes. Launder using an oxygen bleach.

EGG
Soak in product containing enzymes. Launder.

FRUIT JUICE
Rinse with cool water.

GRASS
Soak in product containing enzymes. If stains persist, launder using a chlorine bleach (if safe for fabric) or oxygen bleach.

GREASE SPOTS, OIL
Pre-treat with pre-wash stain remover or liquid laundry detergent. For heavy stains, place stain face down on clean paper towels. Apply cleaning agent to back of stain. Replace paper towels under stain frequently. Let dry, rinse and launder using hottest water safe for fabric.

INK
Use ink eradicator on undyed, untreated linen.

LEMON, LIME JUICE, VINEGAR
Rinse immediately with cool water.

LIPSTICK
On pure linen, rub with a little salad oil to dissolve lipstick, then launder to remove oil.

MEAT JUICE
Rinse with cool, never hot, water.

MILDEW
Badly mildewed fabrics may be beyond repair. Launder stained item using chlorine bleach, (if safe for fabric). Or soak in oxygen bleach and hot water. Then launder.

PERSPIRATION
Use pre-wash stain remover or rub with bar of soap. If color of fabric has changed, apply ammonia to fresh stains, white vinegar to old stains and rinse. Launder using hottest water safe for fabric.

RED WINE
Cover with salt if stain is fresh, then rinse with cool water. If stain has dried, try club soda.

SCORCH
Treat same as for mildew (listed above).

TAR
Scrape residue from fabric. Place stain face down on paper towels. Sponge with cleaning fluid. Replace towels frequently. Launder in hottest water safe for fabric.

TOMATO
Rinse with cool water.

WHITE WINE
Use club soda.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Troubleshooting tips

Read here, then call us

Even though your washer dryer has been carefully designed and constructed, something may still go amiss with your machine. Before rushing to technician, please check that the operations listed below have been carried out. In many cases you will save time, money and a bother. Our statistics show that many calls made to our service representatives could have been solved with a little more attentions to these basic operations.

The washer dryer won't start

Check that:

• the plug is pushed right into the main socket
• the door is closed tight
• the ON/OFF button has been pressed

The washer dryer won't fill with water

Check that:

• the tap is open and properly connected to the inlet pipe
• the inlet pipe is not bent
• the inlet pipe is placed at least 80cm/32in. above ground level

The washer dryer drains continuously

Check that:

• the drain hose is not blocked
• the drain hose is placed at least 80 cm/20 inches above ground level but not more than 1 meter/40 inches above ground level.
• the drain pump doesn't work, the filter net of the drain pump is blocked

There is too much foam in the tub

Check that:

• the detergent being used is meant for automatic machines and not for washing by hand
that the amount used is correct as stated in this manual and not more

The washer dryer vibrates too much when spinning

Check that:

• the shipping bolts have been removed (see installation manual)
• the machine is level
• the washing load is according to the instructions given in this booklet

The washer dryer fills up with water and won't drain.

Check that:

• The drain hose is only 6" into the stand pipe.
• The drain hose is not clogged
• Standpipe is correct specification

The washer dryer is not drying

Check that:

• the plug is fitted firmly into the main socket
• the door is properly closed
• the wash program knob is in position *
• the drying time knob is not in position 0.
• Use the cotton (blue) hotter cycle with cotton fabrics, and use synthetic (red) cooler cycle for synthetic fabrics.
• the recommendations for the maximum loads and drying times have been followed

Wrinkling

Check that:

• avoid mixing heavy fabrics with light fabrics
• Load your dryer to allow for enough room for clothes to tumble
• Make sure you are not using the cotton drying cycle with synthetic clothes
• the recommendations for the maximum loads and drying times have been followed

Manufacturers Supply Inc dba Majestic Appliances © 2004

Owner Care

Maintenance Tips

Owner Care

Water,exterior, interior, winterizing, detergent, pump, technical specifications

Water Hoses

Periodically check both ends of the water supply hoses to ensure that the washers have no cracks or deterioration and that the hoses themselves have no kinks, bulges or worn spots. Replacing inlet hoses from time to time can prevent hose failure and water damage.

Exterior

Keeping the exterior of the unit clean will preserve the value of your investment. Use a soft cloth and liquid cleanser to clean and maintain the exterior.

Interior

Do not use solvents either to clean the machine or to do the wash.Clean the detergent dispenser ever so often. This is very simple and should be done with water. Detergent dispenser - Your machine has an extractable dispenser to make it even easier. From time to time, using water and a damp clothes remove excess detergent, softener and any build up of bleach that may have accumulated in the detergent drawer.

Winterizing

To winterize your appliance, follow these steps:
1) Turn the power off
2) Put 1/2 quart of R.V.type potable antifreeze in the machine and close the door
3) Turn the program selector knob to Spin. Turn the power on and let the appliance spin for 1-2 minutes
4) Turn the power off and unplug the washer.
5) Shut off water at both faucets and disconnect water inlet hoses from faucets and drain.
6) Put 1/2 quart R.V. type potable anti-freeze in machine. DONE!

To put the appliance back into service.
1) Make sure the RV Water supply is clear of antifreeze.
2) Hook up the power and water as before.
3) Run the water through the delicate cycle with 2/3 tablespoon of detergent to clean out appliance.

If you are putting antifreeze in the water lines of an RV or Boat, run the machine until you see pink water introduced into the drum. Then turn the power off and advance the timer to spin. Turn the power back on and spin for 30 seconds to get antifreeze into the entire system. Now turn the power off and continue steps 4 and 5 and 6 above.

Pump

Self Cleaning Pump - Your washer dryer is equipped with a self-cleaning pump. It is therefore not necessary to carry out cleaning and maintenance operations. Some objects such as buttons, coins, etc., may sometimes drop into the pump and must be removed. These items become trapped in a special “anti-chamber” which can be reached through the front part of the pump. Open cover to pump, turn couinter clockwise to acces pump chamger, and remove any coins, buttons, etc. Pump chamber should be inspected every six months.

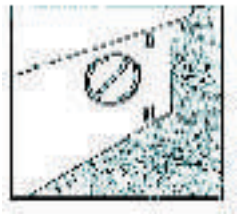

Note: Some water may spill out when removing the cover. Place towel onk floor to absorb water.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Technical Specifications

Model	MJ9000V
Rated Volts	110V/60Hz
Washing Input Power	330W
Spin Input Power	700W
Wash Capacity	5 kg (11 lbs)
Spin Capacity	5 kg (11 lbs)
Drying capacity	2.5 kg (5.5 lbs)
Spin Rotation Rate	1000-1200 RPM
Wash Programs	16
Water Pressure	.05-a (Mpa)
Outside dimensions H x W x D	33 1/4 x 23 3/8 x 22 inches
Weight	72 kg (159 lbs)

Getting Service

MAJESTIC™ has hundreds of service agents all over the country. Call us on our toll free hotline (1-800-678-8002) and we will serve your needs. Remember that if your service call is the result of component failure we will be happy to cover it under your warranty. If it is not, you will be charged for the time and travel. Our service center is available Monday through Friday from 8:00 am to 5:00 PM Pacific Time. You will find our technicians helpful, knowledgeable and friendly.

What if you need help on weekends? Majestic™ appliances has a web site with tons of helpful information, including "**Service knowledge on demand™**". You can watch a movie that assists in trouble shooting your problem and making the repair. No other company offers such complete service.

Remote Locations

In certain cases, even the largest appliance manufacturers do not have service in remote locations. Having product in a home is one thing. Having appliances in a home that moves all the time is another. Majestic has taken serveral important steps to accommodate this difficult situation. **Service knowledge on demand™** is one such step that only Majestic offers. Often applaince dealers who service traditional home appliances can view our training movies online and make a repair where no other option would be available. But after all of these steps are exhasuted Majestic Appliances may have to request that an RV drive to the nearest authorized service dealer we can find, to provide service.

Improper installations, by owners or dealers are the responsibility of the installer. Majestic is happy to provide technical support in such cases. Service costs and travel expense will be the responsibility of the installer.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Owner Care

Warranty Information

Your Majestic™ appliance is covered by this warranty under normal personal, family, household or RV use in the US and Canada

Warranty

Your Majestic™ Appliance is warranty for 1 full year from the original purchase on the mechanical parts only when installed in accordance with the instructions in the manual. It is the option of the fac≠tory to replace or repair any part which become defective in workmanship or material under normal personal, family or household use.
During this one year, Majestic™ Appliance will provide all labor and parts necessary to repair any defect as long as the appliance has been installed and operated in according with the instructions provided. In the case of a tight installation, including RV's or Marine pleasure craft, providing ready access to the appliance is the responsibility of the owner.
In no event, shall Majestic™ Appliances or its parent company, be liable for incidental or consequen≠tial damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workman≠ship, incorrect installation procedures or materials not provided by Majestic™ appliances. Therefore, service calls, diagnosis, and repair costs for a service call which does not involve defective work≠manship or materials will be the responsibility of the consumer/owner. This might include but is not restricted to, improper hookup or leveling, cleaning or air and/or water filters, replacing broken door handles, or excessive movement caused by travel or recreation or installation.
Being fair, most work is covered. If the machine has malfunctioned Majestic™ covers it or if the installer/consumer has omitted or done something to cause the machine to malfunction, they cover it.
You can call us toll free at 1-800-678-8002 for service. Our address is

MSI/Majestic Appliances
3201 NW Lower River Rd. #9
Vancouver, WA 98660

Extended Warranty Information

Contact us at our office for up-to-date information on extended warranty costs. You can obtain an additional
warranty for 1, 3 or 5 years through our exclusive warranty agreement. To be eligible for this warranty you must use the machine for personal use, not in a commercial application, purchase the coverage, register the contract and received your contract number or certificate. The unit must be registered with our warranty agency and have a contract number issued within the first year of ownership,
to the original owner, or this offer is void.

Manufacturers Supply Inc dba Majestic Appliances © 2004

Owner Care
Accessories

You have a broad selection of installation and owner accessories available. Just ask your local dealer or give us a call.

PN 17-1051 Dryer Vent Kit includes:
Louvered Vent Hood
Pipe and Collar
UL Listed Transition Duct
(2) Clamps

PN 17-1052 Econo Outside Vent
Calcium Filled Polypropylene
Melting Point 325 degrees approx.
UV Inhibitor added
Opens with ease for maximum exhaust flow
Curved Louvers for quieter operation
Durable Weather Resistant
Dimensions --- 6" wide x 6" tall x 5/8" flange depth
Free Air--4" diameter = 19.5 square inches

PN 17-1054 Deluxe Chrome Outside Vent
Die Cast ZAMAK with chrome finish
Black polypropylene flange
4" hose adapter
Predrilled for #8 screws
Dimensions-- 5.25" tall x 5.8" wide x 2.25" deep
UV Inhibitor added

PN 17-1053 White Deluxe Outside Vent
Paintable ABS
Melting Point 325 degrees approx.
UV Inhibitor added
Easy Installation
Rubber Flap quiet when traveling
Durable Weather Resistant
Dimensions --- 5.25" wide x 6" tall x 2.25" deep
Free Air--4" diameter = 19.5 square inches

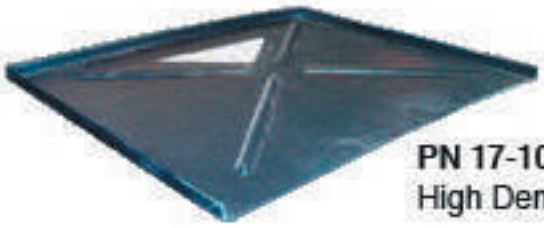

PN 17-1056 Drip Pan
High Density ABS

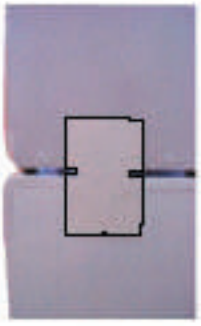

PN 17-1050 Stackable Attaching Kit
Parts for stacking the Washer and Dryer Separates

PN 17-1060 Majestic Laundry Detergent- Low Sudsing Action

©2003 Manufacturers Supply, Inc.